
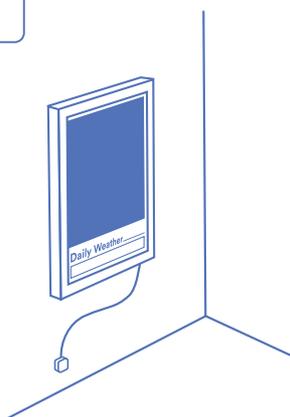


Conditions

- Please make sure you don't have any VPN services turned on during setup.
- The following process will work on Apple computers/iPads/iPhones and Android smartphones/tablets. If you need to use a PC, you may have to download and install the following service: www.support.apple.com/downloads/bonjour_for_windows (Bonjour is a universal program developed by Apple, it enables any computer (including non-apple) to talk to another device, like a printer, ...or Weather Poster).

Setup

We're going to connect to your Weather Poster's WiFi access point from your phone/tablet/computer, we will then configure your Weather Poster to use your home/work WiFi so it can get online.

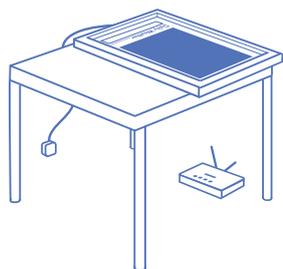

- ① For the initial setup, plug your poster into the power socket that's closest to your WiFi internet router. Wait for 60 seconds, while your Weather Poster boots up.
- ② - Open up your computer, tablet or phone from within a couple of meters of the poster.
 - Go to '**Settings**' and then '**WiFi**'.
 - Connect to the '**WeatherPoster**' Wifi.The password is [REDACTED] See print-out with poster or email hello@typified.io
- ③ Open up your internet browser of choice (Chrome, Safari, Internet Explorer, etc), and type: **192.168.3.1** into the website address field.
- ④ Then follow the website's instructions. When asked, enter the following:
 - Device username: **root** (all lowercase)
 - Password: [REDACTED] See print-out with poster or email hello@typified.ioOnce logged in, you will need to select your own regular home/office WiFi from the menu and enter the password so your Weather Poster can use your internet.
- ⑤ Once your Weather Poster is online, you can disconnect your device from the Weather Poster's WiFi and reconnect to your usual home/office WiFi.
- ⑥ Now, that your Weather Poster is online. You can now hang it where you would like. We recommend hanging no further than 10 meters from your Wifi router and also somewhere which will naturally catch your eye as you go throughout your day.

*if you're having trouble with any of these steps, we have a guide with more information at www.typified.io/help

Hey, that didn't work

- Please check in your device's settings to see if there are any updates available from the manufacturer.
- Sometimes, the WiFi connection stage on the 192.168.3.1 website needs to be repeated. We've seen a case where this step had to be repeated three times before the Weather Poster accepted the home WiFi.
- Make sure your device is still connected to the 'WeatherPoster' WiFi, whilst your completing steps 2 - 4
- Restart the poster by turning the plug off and then back on at the wall. Then start again from step 2.
- If the above isn't helping, please email us at hello@typified.io and we will get back to you ASAP.